

Ritz

FALL PROTECTION

USER INSTRUCTION MANUAL



CONNECTOR

This instruction manual
applies to RTZ17D1



ANSI Z359.12-2009

BKLRT 18-01

Please read and understand the manufacturer's instructions for each component or part of the complete system. Manufacturer's instructions must be followed for proper use, care, and maintenance of this product. These instructions must be retained and be kept available for the worker's reference at all times. Alterations or misuse of this product, or failure to follow instructions, may result in serious injury or death.

Note: The user is advised to keep this user instructions document for the life of the product.

Manufacturer	:	Ritz Fall Protection 1-800-451-3077 and Ritz Fall Protection.com
Certification Body	:	SATRA Technology Centre, Wyndham Way, Telford Way, Kettering, NN16 8SD, UK (Notified Body 0321)
Ongoing Assessment Body	:	SGS Fimko Oy, Takomotie 8, FI-00380 Helsinki, Finland (Notified Body 0598)

TECHNICAL SPECIFICATIONS:

MODEL	MATERIAL	FINISH	GATE STRENGTH	PROOF LOAD	MINIMUM BREAKING STRENGTH		GATE OPENING	APPROX. WEIGHT
					MAJOR	MINOR		
			GATE FACE GATE SIDE	LBS/ kN	LBS/ kN	LBS/ kN	INCH/ MM	LBS/ GMS
RTZ17D1	Alloy Steel	Zinc Plated Galvanized	3600 lbs 3600 lbs	3600 lbs 16 kN	5000 lbs 23 kN	3600 lbs 16 kN	0.84 Inch 21 mm	0.54 lbs 265.09 gms

This manual must be read and understood in its entirety and used as part of fall protection training program as required by OSHA or any state regularity agency. These instructions are intended to meet the manufacturer instructions as required by ANSI Z359.12 and OSHA 1926. The user must fully understand the proper use and limitations of the equipment.

1. MARKING:



2. GENERAL REQUIREMENTS, WARNINGS AND LIMITATIONS:


- Locking Snap Hook reduces, but does not eliminate, possibility of unintentional disengagement.
- Gate must close and lock.
- Light passing through gate holes, indicates Snap Hook is not locked.
- The Equipment is designed for use as a part of the personal fall protection system. Components must not be used for any other operation other than that which it has been designed and approved. Fall Arrest systems are designed to comply with OSHA.
- Fall Restraint System must be designed by a Qualified Person, and must be installed and used under the supervision of a competent person.
- All authorized persons/users must refer the regulation governing occupational safety, as well as applicable ANSI or CSA standards. Please refer to product labeling for information on specific OSHA regulations, ANSI and CSA standards met by the product. Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces. Age, fitness, health conditions can seriously affect the worker in case a fall occurs. Pregnant Women and minors should not use this equipment.
- Proper precautions should always be taken to remove any obstructions, debris, material, or other recognized hazards from the work area that could cause injuries or interfere with the operation of the system. All equipment must be inspected before each use according to the manufacturer's instructions. All equipment should be inspected by a qualified person on a regular basis.
- To minimize the potential for accidental disengagement, a competent person must ensure system compatibility.
- Equipment must not be altered in any way. Repairs must be performed only by the manufacturer, or persons or entities authorized in writing by the manufacturer.
- Any product exhibiting deformities, unusual wear, or deterioration must be immediately discarded. Any equipment subjected to a fall must be removed from service. The authorized person/user should have a rescue plan and the means at hand to implement it when using this equipment. Never use fall protection equipment for purposes other than those for which it was designed.
- Fall protection equipment should never be used for towing or hoisting.
- All synthetic material must be protected from slag, hot sparks, open flames, or other heat sources. The use of heat resistant material is recommended in these applications.
- Never use natural materials (manila, cotton, etc.) as part of a fall protection system.
- Do not expose this equipment to chemicals which may have a harmful effect on the materials used to construct it. Be specially aware of caustic environment, or those that contain high levels of organic acids or bases. If you are uncertain about the safe operation of this equipment in any environment, contact Ritz Fall Protection for instructions.
- Do not use the equipment around moving machinery or electrical hazards.

3. RESCUE PLAN: Rescue operation must be performed by a trained and competent personnel. The rescue operation must be performed under the supervision of the rescue expert team or personnel. It is advised that while working on site, work in pairs. Before going for the work the user must have the rescue plan ready according to the work.

4. IF EQUIPMENT IS SUBJECTED TO A FALL: Remove the equipment from service immediately if it has been subjected to the forces of a fall arrest. Contact your distributor or Ritz Fall Protection about policies regarding replacement of Ritz Fall Protection components involved in a fall.

5. SPECIFIC INSTRUCTIONS:

SNAP HOOKS AND KARABINERS

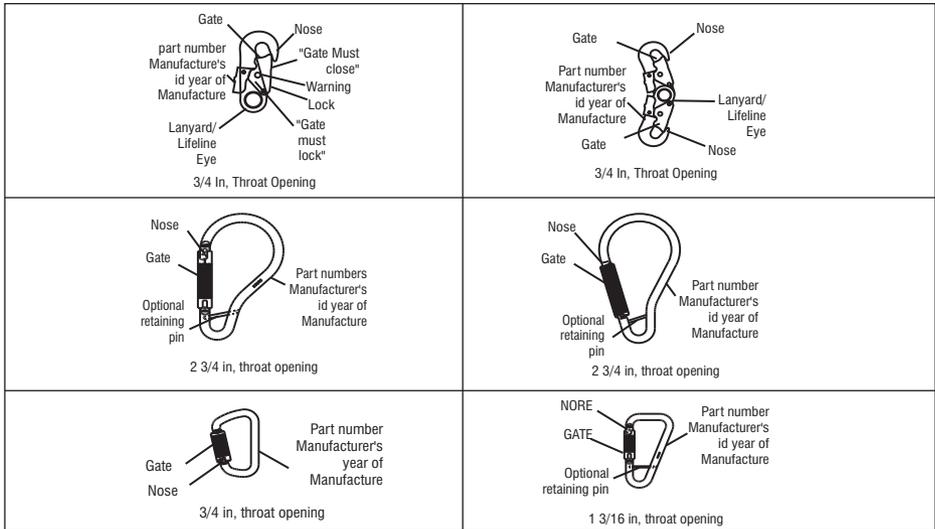

• **Description:**

- **Snap Hooks:** These are self-closing/self-locking connectors. The Snap Hooks provide an eye for permanent attachment of a lifeline or lanyard.
- **Karabiners:** The self-locking Karabiners are self-closing/self-locking connectors. All Karabiners on request can be supplied with a captive pin that can be used to remain permanently connected to the lanyard or the lifeline.

• **Definitions:**

- **Anchorage:** A properly selected means, such as a structural beam or member, to which the system is anchored.
- **Anchorage Connector:** A component, such as a connector or subsystem, specifically intended for coupling the system to an anchorage.
- **Connector:** A component or element used to couple parts of the system together, such as a lifeline to an anchorage using a Karabiner as an anchorage connector.
- **Component:** An assembly of parts which cannot be disassembled without mutilating, or without the use of special tools, intended to perform one function in the system. Examples of components include a full body harness, lanyard, and connector.

WARNING: This product is part of a personal restraint, work positioning, suspension, or rescue system. These instructions must be provided to the user and rescuer. The user must read and understand these instructions or have them explained to them before using this equipment. The user must read and follow the manufacturer's instructions for each component or part of the complete system. Manufacturer's instructions must be followed for proper use and maintenance of this product. Alterations or misuse of this product or failure to follow instructions may result in serious injury or death.

IMPORTANT: If you have questions on the use, care, or suitability for use of this safety equipment, contact Ritz Fall Protection

6. APPLICATIONS:


Purpose: Ritz Fall Protection Snap Hooks and Karabiners are designed to be used as anchorage connectors or connectors for fall arrest, restraint, work positioning, suspension, or rescue systems.

Following are descriptions of these applications.

- **Fall Arrest:** Fall arrest systems typically include a full body harness and a connecting subsystem, such as a self retracting lifeline. Maximum permissible free fall is 6 feet.
- This type of system is used where a free fall is possible before the fall is arrested.


- **Restraint:** Restraint systems typically include a full body harness and a lanyard or restraint line used to restrain the user from reaching a hazard (leading edge roof work). This type of system is used where no vertical free fall is possible.
- **Work Positioning:** Work positioning systems typically include a full body harness and lanyard to position or support the user at the work position. Maximum permissible free fall is 2 feet.
- **Suspension:** Suspension systems typically include a full body harness, chair, and lanyard that is used to suspend or transport the user vertically.
- **Rescue:** Rescue systems typically include a full body harness, and a connecting subsystem, such as a lanyard, that is used to retrieve a victim in a rescue application.

SNAP HOOKS AND KARABINERS APPLICATIONS:

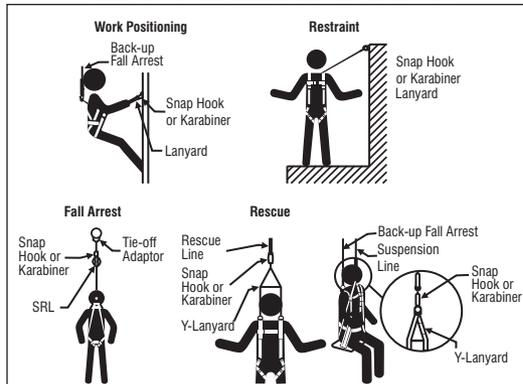

WARNING: Do not use these Snap Hooks or Karabiners for material handling applications.

- **Limitations:** The following application limitations must be considered before using this product:
 - **Compatibility:** These Snap Hooks and Karabiners must be connected to a compatible connection, such as a properly sized D-ring. Failure to do so could cause disengagement (roll-out), or damage to Snap Hook or Karabiner. Self locking Snap Hooks and Karabiners reduce, but cannot eliminate, the possibility of roll-out. See Figure below for examples of correct and incorrect connections.
 - **Capacity:** These Snap Hooks and Karabiners are designed for use by persons with a combined weight (person, clothing, tools, etc.) of not more than 420 lbs. Only one personal protective system may be connected to the connectors/anchorage connectors at any time except for emergency situations.
 - **Personal Fall Arrest System:** Personal fall arrest systems (PFAS) used with these Snap Hooks and Karabiners must meet the system requirements given in section 8.
 - **Free Fall:** PFAS used with these Snap Hooks and Karabiners must be rigged in such a way as to limit the free fall to 6 feet (see ANSI Z359.1) or 12 feet (see ANSI Z359.13). See associated connecting subsystem manufacturers instructions for further information.
 - **Fall Clearance:** Ensure that enough clearance exists in your fall path to prevent striking an object. The amount of clearance needed is dependent upon the type of connecting subsystem used (energy absorbing lanyard, self retracting lifeline, etc.), and the anchorage location. Refer to manufacturer's instructions of the connecting subsystem or component for more information on fall clearance.
 - **Restraint, Work Positioning, Suspension, and Rescue Systems:** Restraint, work positioning, suspension, and rescue systems selected for use with these Snap Hooks and Karabiners must meet the requirements given in section 8.

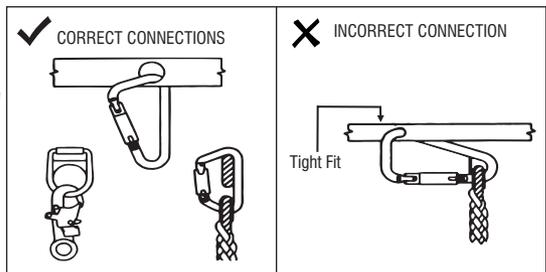

- **Physical And Environmental Hazards:** Use of this equipment in areas with physical or environmental hazards may require additional precautions to reduce the possibility of injury to the user or damage to the equipment. Hazards may include, but are not limited to: heat, severe cold, chemicals, corrosive environments, high voltage power lines, gases, moving machinery, sharp edges and abrasive edges. Contact Ritz Fall Protection if you have any questions about using this equipment where physical or environmental hazards exists.
- **Corrosion:** Use near seawater or other corrosive environments may require more frequent inspections or servicing to ensure corrosion damage is not affecting the performance of the product.
- **Chemical Hazards:** Solutions containing acid or caustic chemicals, especially at elevated temperatures, may cause damage to this equipment. Consult Ritz Fall Protection if doubt exists concerning installing this equipment where chemical hazards are present.
- **Electrical Hazards:** Do not install Snap Hooks or Karabiners when they, or the user, may come into contact with electrical power lines.
- **Training:** This equipment is intended to be installed and used by persons who have been properly trained in its correct application and use. Refer to national Standards including ANSI Z359 (.0, .1, .2, .3, and .4) family of standards on fall protection, ANSI A10.32, and applicable local, state and federal (OSHA) requirements governing occupational safety for more information about work positioning systems.

- **Before each use of this equipment inspect it according to the following guidelines:**

A formal inspection of fall protection products/ components must be performed at least every six months by a competent person other than the user. The frequency of formal inspections should be based on conditions of use or exposure. Record the inspection results in the equipment record table at the end of this manual.

- **Inspecting The Connectors:**

Before each use, visually inspect according to steps listed in below.

The Snap Hook or Karabiner must be inspected by a competent person, other than the user, at least annually. Record results of each formal inspection in the inspection in the equipment record table.

- **Inspection Steps:**

STEP1: Inspect for damage. Look carefully for cracks, sharp edges, burrs, dents, or deformities. Check for bending or distortion.


STEP2: Inspect for excessive corrosion. The gate and lock should operate smoothly, with no difficulty. Gates must fully close and engage nose of hook.

STEP3: Inspect markings. These should be present and fully legible.

STEP4: Inspect each system component or subsystem according to manufacturer's instructions.

- Record the inspection date and results in the in the inspection and maintenance log provided at the end of this instructions manual.
- If inspection reveals a defective condition, remove the unit from service and destroy it, or contact an authorized service center for repair.

IMPORTANT: If this equipment has been subjected to fall arrest or impact forces, it must be immediately removed from service and destroyed, or returned to an authorized service center for repair.

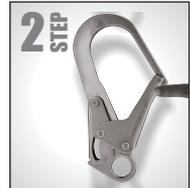

7. OPERATION AND USE:

WARNING: Do not alter or intentionally misuse this equipment. Consult Ritz Fall Protection when using this equipment in combination with components or subsystems other than those described in this manual. Some subsystem and component combinations may interfere with the operation of this equipment. Use caution when using this equipment around moving machinery, electrical hazards, chemical hazards, and sharp edges.

WARNING: Consult your doctor if there is reason to doubt your fitness to safely absorb the shock from a fall arrest. Age and fitness seriously affect a worker's ability to withstand falls. Pregnant women or minors must not use Ritz Fall Protection Snap Hooks or Karabiners.

- **INSPECTION:**

- BEFORE EACH USE of this equipment, carefully inspect it to ensure it is in good working condition. Check for worn or damaged parts. Inspect for sharp edges, burrs, cracks, distortion, or corrosion. Gates must close and lock. Inspect other fall arrest or restraint equipment according to manufacturer's instructions. Do not use if inspection reveals an unsafe condition.


- PLAN your fall arrest, restraint, work positioning, suspension, or rescue system before starting your work. Consider all factors affecting your safety during use. The following list gives some important points to be considered when planning your system:
- **Personal Fall Arrest System Requirements:** PFAS used with these Snap Hooks and Karabiners must meet applicable State, Federal, OSHA, and ANSI requirements. PFAS incorporating a full body harness must be capable of arresting a workers fall with a maximum arresting force of 1,800 lbs., and limit the free fall distance to 6 feet. The deceleration distance for a PFAS must be 42 inches (1.1m) or less. See ANSI Z359.1 and OSHA requirements.
- **Restraint, Work Positioning, and Suspension Systems:** Restraint, work positioning, and suspension systems must meet applicable state and federal requirements. See OSHA requirements.
- **Rescue Systems:** Rescue systems must meet applicable state and federal requirements. See OSHA 1910.146 and ANSI Z117.1.
- **Swing Falls:** Swing falls occur when the anchorage location is not directly above the point where a fall occurs. The force of striking an object while swinging can be very strong, and may cause serious injury. Swing falls can be minimized by working as directly below the anchorage as possible.
- **Sharp Edges:** Avoid working where the connecting subsystem or other system components may come in contact with unprotected sharp or abrasive edges. Do not loop lanyard around small diameter structural members. If the worker is working near sharp edges, protection against abrasion and cut must be provided by the supervisor, using a heavy pad or other means over the exposed sharp edge.
- **Rescue:** When using this equipment, the employer must have a rescue plan and the means at hand to implement it and communicate that plan to the users, authorized persons, and rescuers.
- **After A Fall:** Any equipment which has been subjected to the forces of arresting a fall or exhibits damage consistent with the effect of fall arrest forces, must be removed from service immediately and destroyed by the user, the rescuer, or an authorized person.



• Making Connections:

- **Snap Hook Operation:** To connect the Snap Hook to the connection point, depress the locking mechanism with index finger and pull back gate with thumb. To operate the Snap Hook, squeeze the locking mechanism on the back side and press in on the gate.
- **Karabiner Operation:** To connect the Karabiner to the connection point, rotate the gate clockwise and push to the center of the Karabiner. The Karabiner that have a triple locking mechanism must be pulled up before rotating it in the clockwise motion. When positioned around a connection point, release the gate to close and lock.
- **Use Considerations:** When making a connection using a Snap Hook or Karabiner, the mating connector must be compatible in size and shape. Improper loading directions can cause the hook to fail or the gate to open, releasing the load. Do not use hooks that will not completely close over the attachment object. Do not connect Snap Hooks to Snap Hooks, Karabiners to Karabiners, or Snap Hooks to Karabiners. Do not install more than one Snap Hook or Karabiner into a single connection ring or opening (except for emergency situations). Do not connect Snap Hooks or Karabiners to objects or openings that may abrade or wear the hook material.
- **Subsystem Assemblies:** Ritz Fall Protection is not responsible for subsystem assemblies not manufactured by Ritz Fall Protection. Figure mentioned below illustrates connection of typical fall arrest, restraint, work positioning, suspension, or rescue equipment to the connector. Following are recommended methods of attaching subsystem elements and components to Ritz Fall Protection supplied connectors:
 - When using an energy absorbing lanyard, connect the energy absorber "pack" end to the harness.
 - When using a self retracting lifeline, ensure the device is properly positioned so that retraction is not hindered.
 - When connecting, ensure connections are fully closed and locked.
 - Ensure all connections are compatible in size, shape, and strength.
 - Do not use a knot to connect a lifeline to the connector. Do not pass a lanyard or lifeline through a connector and hook it back into the lanyard or lifeline. Connectors attached to synthetic rope lifelines must be attached using a spliced eye termination and thimble. See figure below.:
 - (A). The splice must be made using five tucks.
 - (B). Connectors attached to wire rope lifelines must be attached using a formed eye termination utilizing a thimble. The following are accepted methods of forming spliced eyes.
 - (C). Spliced eye with one swagged fitting.
 - (D). Return eye with a minimum of two swagged fittings. Return eye with a minimum of three wire rope clips tightened according to clip manufacturer's specifications. Completed connections must support 5,000 lbs. (23 kN).

Subsystem Assemblies:

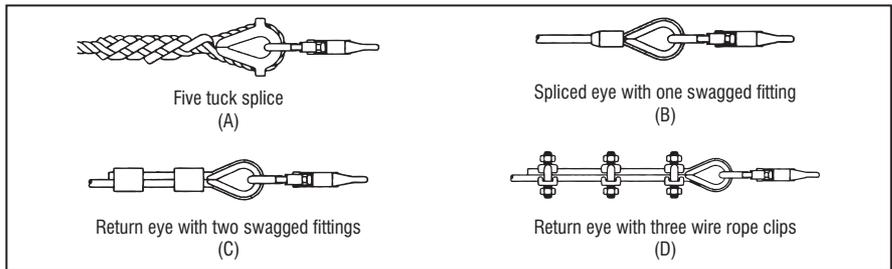

IMPORTANT: Knots must not be used for load bearing end terminations. See ANSI Z359.1. Some knots reduce lifeline by strength 50% or more.

IMPORTANT: If the user splices or forms end terminations, proper procedures must be followed to ensure compatibility in size, shape, and strength.


8. PERIODIC EXAMINATIONS:

- Keep these instructions with the product and fill in the identification sheet, entering the information taken from the markings.
- The periodic examination is essential to test the resistance and condition of the equipment and to guarantee the safety of the user.
- A qualified person must examine this equipment at least once in a year, in strict compliance with the instructions of the manufacturer. The previous check must be recorded on the attached sheet. The frequency of inspection should be increased in accordance with the regulations, if the equipment is in heavy usage or if the equipment is used in harsh environments. Also check also that the markings are legible.

9. SYSTEM REQUIREMENTS:

- **Compatibility of components:** Ritz Fall Protection equipment is designed for use with Ritz Fall Protection approved components and subsystems only. Substitutions or replacements made with non-approved components or subsystems may jeopardize compatibility of equipment and may effect the safety and reliability of the complete system.
- **Compatibility of connectors:** Connectors are considered to be compatible with connecting elements when they have been designed to work together in such a way that their sizes and shapes do not cause their gate mechanisms to inadvertently open regardless of how they become oriented. Contact Ritz Fall Protection if you have any questions about compatibility.
- Connectors (hooks, Karabiners, and D-rings) must be capable of supporting at least 5,000 lbs. (23 kN). Connectors must be compatible with the anchorage or other system components. Do not use equipment that is not compatible. Non-compatible connectors may unintentionally disengage. Connectors must be compatible in size, shape, and strength. Self locking Snap Hooks and Karabiners are required by ANSI Z359.12 and OSHA.
- **Unintentional disengagement (Roll-Out):**

If the connecting element that a Snap Hook (shown) or Karabiner attaches to is undersized or irregular in shape, a situation could occur (of either a self-locking or a non-locking Snap Hook) to open, allowing the Snap Hook or Karabiner to disengage from the connecting point. For ANSI Z359.12-2009 compliant hooks, there are no restrictions on size or shape of the mating connector provided the Snap Hook is free to align with applied load as intended.

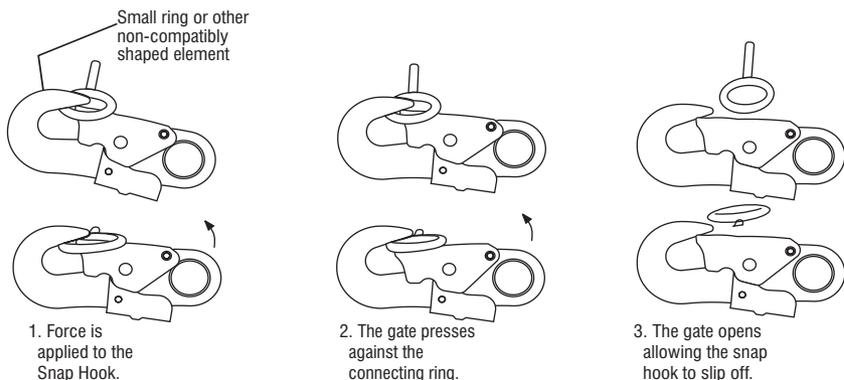

- **Making Connections:** Only self-locking Snap Hooks and/or Karabiners shall be used with this equipment. Ensure all connectors are fully closed, locked and compatible.


Ritz Fall Protection connectors (Snap Hooks and Karabiners) are designed to be used only as specified in each product's user instructions.

Ritz Fall Protection Snap Hooks and Karabiners should not be connected:

- To a D-ring which another connector is already attached.
- In a manner that would result in a load on the gate.

NOTE: Large throat Snap Hooks should not be connected to standard size D-rings or similar objects which can result in a load on the gate, if the hook or D-ring twists or rotates, unless the Snap Hook complies with ANSI Z359.12-2009 and is equipped with a 3,600 lbs. gate. Check the marking on your Snap Hook to verify that it is appropriate for your application.

- In a false engagement, where features that protrude from the Snap Hook or Karabiner catch on the D-ring, and without visual confirmation seems to be fully engaged to the anchor point.
- To each other.
- Directly to webbing or rope lanyard for tie-back (unless specifically provided by the manufacturer).
- To any object which is shaped or dimensioned such that the Snap Hook or Karabiner will not close and lock, or where roll-out could occur. Please refer to the below picture

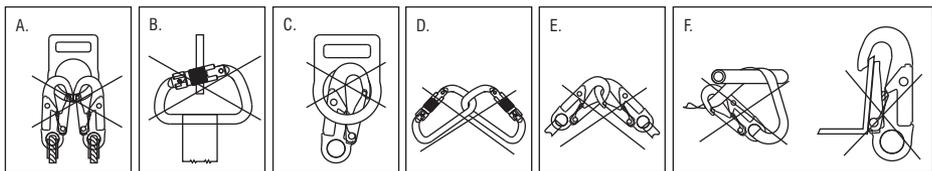

10. OTHER RESTRICTIONS:

- Do not make connections where the hook locking mechanism can come into contact with a structural member or other equipment and potentially release the hook.
- Do not connect a Snap Hook into a loop or thimble of a wire rope or attach in any way to a slack wire rope.
- The Snap Hook must be free to align with the applied load as intended (regardless of the size or shape of the mating connector).
- A Karabiner may be used to connect to a single or pair of soft loops on a body support such as a body belt or full body harness, provided the Karabiner can fully close and lock. This type of connection is not allowed for Snap Hooks.
- A Karabiner may be connected to a loop or ring connector that is already occupied by a choker style space connector. This type of connection is not allowed for Snap Hooks.

11. ANCHORAGE STRENGTH:

The anchorage strength required is dependent on the application type. Following are the requirements of ANSI Z359.1 for these application types:

- **Fall Arrest:** Anchorages selected for fall arrest systems shall have a strength capable of sustaining static loads applied in the directions permitted by the system of at least: (1) 5,000 lbs. (23 kN) for non-certified anchorages, or (2) Two times the maximum arresting force for certified anchorages. When more than one fall arrest system is attached to an anchorage, the strengths set forth in (1) and (2) above shall be multiplied by the number of systems attached to the anchorage.
- **As Per OSHA 1926.500 and 1910.66:** Anchorages used for attachment of personal fall arrest systems shall be independent of any anchorage being used to support or suspend platforms and capable of supporting at least 5,000 lbs. (23 kN) per user attached, or be designed, installed and used as part of a complete PFAS which maintains a safety factor of at least two, and is under the supervision of a qualified person.
- **Work Positioning:** The structure to which the work positioning system is attached must sustain static loads applied in the directions permitted by the work positioning system of at least 3,000 lbs., or twice the potential impact load, whichever is greater. See OSHA1926.502. When more than one work positioning system is attached to an anchorage, the strengths stated above must be multiplied by the number of work positioning systems attached to the anchorage.
- **Restraint:** Anchorages selected for restraint and travel restraint systems shall have a strength capable of sustaining static loads applied in the directions permitted by the system of at least: (1) 1,000 lbs. (4.5 kN) for non-certified anchorages, or (2) Two times the foreseeable force for certified anchorages. When more than one restraint and travel restraint system is attached to an anchorage, the strengths set forth in (1) and (2) above shall be multiplied by the number of systems attached to the anchorage.
- **Rescue:** Anchorages selected for restraint and travel restraint systems shall have a strength capable of sustaining static loads applied in the directions permitted by the system of at least: (1) 3,000 lbs. (13.3 kN) for non-certified anchorages, or (2) Five times the foreseeable force for certified anchorages.

12. TRAINING:

The anchorage strength required is dependent on the application type. The following are the requirements of ANSI Z359.1 for these application types:

It is the responsibility of the purchaser of the Ritz Fall Protection Karabiner to ensure that Karabiner users are made familiar with these User

Instructions and trained by a competent person in: (1) workplace hazard awareness and hazard identification, evaluation and control; (2) how to properly select, inspect, use, store and maintain the Karabiner; (3) how to determine and acceptably limit free fall distance, total fall distance, and maximum arresting force; (4) proper attachment locations and proper attachment methods including compatibility of connections to reduce the probability of accidental disengagement ("rollout"); (5) how to evacuate from a hazardous space; (6) what to do after a fall, to protect the user from injury, including emergency rescue planning and execution; and (7) the consequences of improper use of the equipment and of failure to follow instructions and training. If the Karabiner is to be used for confined space applications, the user must also be trained in accordance with the requirements of OSHA regulation 29 CFR 1910.146 and ANSI Z117.1. Training must be conducted without undue exposure of the trainee to hazards. The effectiveness of training should be periodically assessed (at least annually) and the need for more training or retraining, Should be determined. Ritz Fall Protection offers extensive training programs. For further information & training, please contact Ritz Fall Protection.

13. OTHERS:

- **Maintenance And Servicing:**

Equipment which is damaged or in need of scheduled maintenance must be tagged as "UNUSABLE" and removed from service. Corrective maintenance (other than cleaning) and repair, such as replacement of elements, must be performed by an authorized service center. Authorization to perform this work must be in writing. Do not attempt field service of the Karabiner. Periodically lubricate the area around the hinge and inner sleeve (on both sides of the Karabiner) with a light-weight penetrant oil.

- **Storage:**

Store the Karabiner in a cool, dry and clean place out of direct sunlight. Avoid areas where heat, moisture, light, oil, and chemicals or their vapors or other degrading elements may be present. Equipment which is damaged or in need of scheduled maintenance should not be stored in the same area as usable equipment. Heavily soiled, wet, or otherwise contaminated equipment should be properly maintained (eg. dried and cleaned) prior to storage. Prior to using equipment which has been stored for long periods of time, a Formal Inspection should be performed by a competent person.

WARRANTY: All Ritz Fall Protection products bear 1- year warranty against manufacturing defects, applicable to unused Ritz Fall Protection products, from the date of purchase. However, Ritz Fall Protection shall not be liable for any accident or damage while the product is in use.

LIFESPAN: The estimated product Lifespan of this product is 10- years from the date of manufacturing. The following factors can reduce the Lifespan of the product : intense use, contact with chemical substances, especially aggressive environment, extreme temperature exposure, UV exposure, abrasion, cuts, violent impacts, bad use, or maintenance.

DISCLAIMER: This information on the product is based upon technical data that Ritz Fall Protection obtained under laboratory conditions and believes to be reliable. Ritz Fall Protection does not guarantee results and takes no liability or obligation in connection with this information. As conditions of end-use are beyond our control, it is the user's responsibility to determine the hazard levels and the use of proper personal protective equipment. Persons having technical expertise should undertake evaluation under their own specific end-use conditions, at their own discretion and risk. Please ensure that this information is only to check that the product selected is suitable for the intended use. Any product that is damaged, torn, worn, or punctured should be immediately discontinued from usage.

EQUIPMENT RECORD				
Product				
Model & type/Identification		Trade Name	Identification number	
Manufacturer		Address	Tel, email into use	
Year of manufacture		Purchase Date	Date first put into use	
Other relevant information (eg. document number)				
PERIODIC EXAMINATION AND REPAIR HISTORY				
Date	Reason for entry (periodic examination or repair)	Defects noted, repairs carried out and other relevant information	Name and signature of competent person	Periodic examination next due date



800-451-3077 | RitzSafety.com